



Freesat All Channels ▾ SAT 18 NOV 19:20 🔔

101
BBC ONE

Strictly Come Dancing
18:45 - 20:10 • 50 mins left Ⓢ AD
Tess Daly and Claudia Winkleman present from the world-famous Blackpool Tower Ballroom as the eight remaining couples raise their...

WATCH INFO

-24h +24h Now TODAY SUN MON TUE WED THU FRI SAT

	19:00	19:30	20:00	20:30
101 BBC ONE LON	Strictly Come Dancing		Michael McIntyre's Big Show	
102 BBC TWO HD	Rugby Union: Scotland	Rugby Union: England v Australia		Dad's Army
103 ITV	New: You 'v... Ninja Warrior UK		New: The X Factor Live	
104 CHANNEL 4	Volatile Earth: Killer Hurricanes		First Humans: The Cave Discovery	
105 CHANNEL 5 HD	Can't Pay? We'll Take It Away!		Can't Pay? We'll Take It Away!	
106 BBC ONE HD	Strictly Come Dancing		Michael McIntyre's Big Show	

Your

USER GUIDE

INSTALLING YOUR MANHATTAN SX

Unpack the following from your Giftbox:



Remote control




Manhattan SX




2x AAA batteries




SCART Adapter



HDMI cable

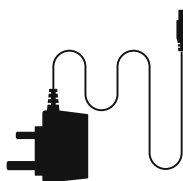

Power adapter

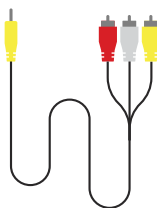

AV Lead

You'll need:

- A TV with an HDMI input, SCART input or RCA audio/video inputs.
- A satellite TV cable from a dish pointed at 28.2° East.




Before you plug in, please read the Safety section of the Important Information booklet.

Connect Up


- Connect the satellite TV cable from your satellite wall socket to SX's 'DISH IN' socket.
- To connect to an HD or HD Ready TV, use the HDMI lead.
- To connect to an older, analogue TV:
 - Connect the single yellow minijack at one end of the AV lead to the SX's 'AV' socket.
 - If your TV has yellow/white/red RCA inputs, connect the corresponding RCA connectors at the other end of the AV lead directly to your TV.
 - If your TV has a SCART socket, connect the corresponding RCA connectors to the included SCART adapter, then connect the SCART adapter to your TV.
- To receive software updates over the internet, connect the SX to your router using an Ethernet cable. Alternatively, you can connect using Wi-Fi during the initial setup.
- Finally, plug the AC power adapter into a wall socket that is turned off, then connect the other end to the SX.



Switch On

- Open the battery compartment cover on the back of the remote by pushing the catch. Insert the batteries, matching the + and - symbols to what is marked on the inside of the compartment. Replace the cover.
- Turn on the wall socket you connected the Manhattan SX to and it will switch on.
- Turn on your TV set and choose the input you connected your Manhattan SX to. Most TV remotes use a button labelled 'AV', 'SOURCE', 'INPUT' or , with each press cycling through the TV's inputs.
- Follow the on-screen instructions to set up your SX.

WATCHING TV

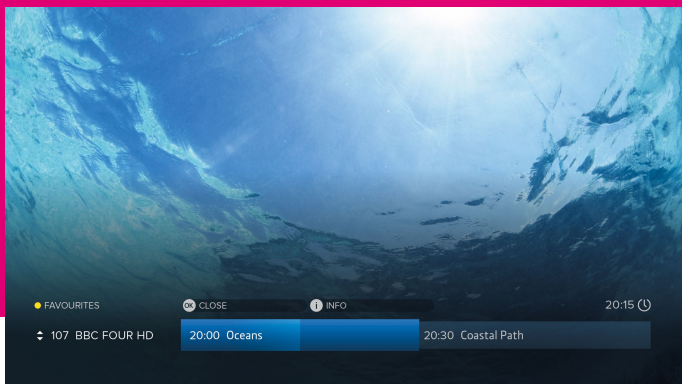

Now & Next Browser

The SX makes it easy to browse what's on whilst watching full screen TV. Press **OK** to display the Now & Next Browser, then use the directional pad to browse what's on.

- To watch a programme on now, press **OK**
- To set a reminder for a programme on later, press **OK** (see page 9)
- To view detailed info about a programme, press **i** (see page 6)

Quickly Changing Channel


There are 3 ways to directly change channel whilst watching TV:

- Press **P-UP** or **P-DOWN** to change to the channel above or below
- Enter a channel number with the number buttons
- Press **SWAP** to change to the last channel you were watching

Volume & Accessibility

- Turn the volume up or down with **V+** or **V-**
- Mute and unmute the sound with **MUTE**
- Toggle Subtitles and Audio Description on and off with the **SUB** and **AD** buttons

TV GUIDE

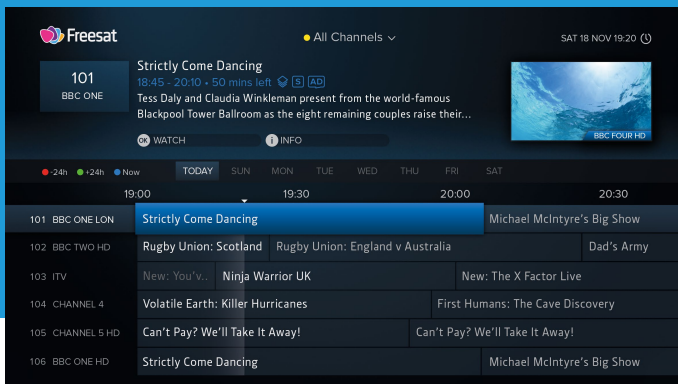

Basics

Press **GUIDE** to display the full TV Guide and browse what's on across the next 7 days using the directional pad.

- To watch a programme on now, press **OK**
- To set a reminder for a programme on later, press **OK** (see page 9)
- To view detailed info about a programme, press **i** (see page 6)

Quickly Navigating

As there are lots of channels and programmes to browse, you can get around more quickly by:

- Pressing **P-UP** or **P-DOWN** to page up or down
- Holding **LEFT** or **RIGHT** to skip through time
- Pressing **●** or **●** to skip 24 hours backwards or forwards


When you've browsed ahead, press **●** to skip back to what's on now.

Lists









The TV Guide can be filtered to show only channels in a certain genre (e.g. Drama or Movies) or your Favourite Channels. Press **●** to select a list. You can also choose to edit your Favourites.

PROGRAMME INFO



The info screen displays the description, genre and other key information for a programme. It is displayed by pressing  when watching TV, using the Now & Next Browser or the TV Guide.

Icons

-  Part of a series
-  In HD
-  Available in HD on another Channel
-  Surround sound audio
-  Programme is in two or more parts (e.g. a movie split by the evening news).
-  Subtitles
-  Audio Description
-  Guidance

Browsing Series & Repeats

- If the programme is part of a series, you can press **UP** to browse all episodes in the schedule.
- If the programme is showing again on any channel, you can press **DOWN** to browse repeats in the schedule.

MENUS



Press **MENU** to display the Main Menu. Use **UP** or **DOWN** to highlight an option and **OK** to select it.

Press **BACK** to go back to a previous menu or **EXIT** to return to full screen TV.

Main Menu Options

TV Guide

Browse what's on across the next 7 days. You can also press **GUIDE** (see page 5).

Reminders

View and cancel reminders that have been set.

Channels

Manage your favourite and protected channel lists or delete channels (see page 8).


Settings

View and modify the SX's settings.

Help

View Help with using the SX and detailed System Info for troubleshooting.

CHANNELS

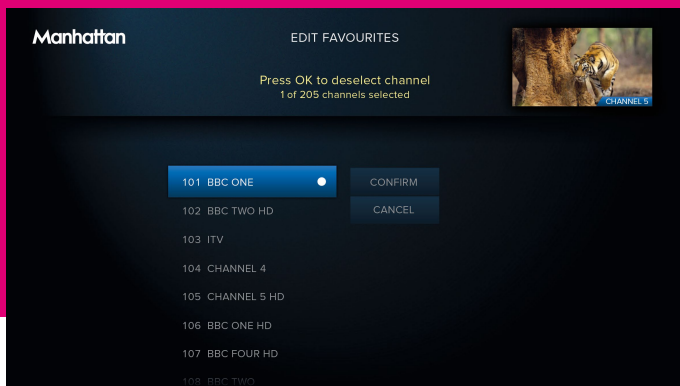

Favourite Channels

Select 'Edit Favourites' in the Channels Menu to choose channels for your favourites list. As explained on page 5, your favourites can be used to filter the TV Guide. They can also be quickly browsed using the Now & Next Browser:

- Whilst Watching TV, press **OK** to display the Now & Next Browser. Notice that in the top left of the browser it shows: ● FAVOURITES
- Whilst the Browser is displayed, each press of ● cycles through your favourite channels

Protected Channels

Protected Channels are hidden and can only be shown by entering your PIN. To choose channels to protect, select 'Edit Protected Channels' in the Protected Channels Menu and then enter your PIN.

When you want to temporarily show your protected channels, select 'Show Protected Channels' in the Protected Channels Menu. After entering your PIN, all Protected Channels will be shown until the SX next enters standby or you choose the option to hide them again.

Deleting Channels

Channels can be deleted entirely by selecting the 'Delete Channels' option in the Channels Menu. If you want to restore them in the future, select the 'Freesat Retune' option in the Tuning section of Settings.

REMINDERS



Using Reminders

When a programme on later is highlighted in the TV Guide or the Now & Next Browser, press **OK** to add a reminder. To cancel it, press **OK** again.

Reminders are displayed 60 seconds before a programme is scheduled to start. The SX has an option in the Tuning section of Settings called 'Reminder AutoTune' that is turned off by default, meaning:

- A reminder will only be displayed if the SX is on
- You must choose to watch the programme within 60 seconds to change the channel
- If you don't, the reminder will be cancelled and the channel will not change

When 'Reminder AutoTune' is turned on:

- If the SX is in standby it will turn on for the reminder and the channel will change automatically
- If the SX is on the reminder will be displayed as normal and at the end of the 60 seconds the channel will change automatically

Managing Reminders

All reminders can be viewed and removed in the Reminders Menu. Press **MENU** and select 'Reminders'.

REMOTE CONTROL



Standby on/off



Volume up/down



Mute



Audio Description on/off



Subtitles on/off



Next/previous channel
when watching TV

Page up/down the TV Guide
and other menus



Show the Main Menu



Show programme
information



Choose options in menus



Navigate menus



Show Now & Next when
watching TV

Select options & perform
on-screen actions



Show the TV Guide



Swap to the last channel
viewed



Back to previous menu or
to watching TV



Exit all menus and watch
TV



Show a channel's
interactive service (if
available)



Enter a channel number

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
There's no picture or sound and even the SX's menus can't be seen	The HDMI/AV cable may be disconnected.	Check the HDMI or AV cable connections between the SX and your TV.
	The input the Manhattan SX is connected to may not be selected on your TV.	Select the correct HDMI/AV input (see your TV's manual for guidance).
	Your TV may not correctly communicate the resolutions it is capable of and an incompatible resolution may be selected.	<ul style="list-style-type: none"> • Turn the SX on and wait 30 seconds • Press MENU • Press & Hold '0' for 5 seconds • The SX will try each of the 3 HD resolutions for 15 seconds in this order: 1080p, 1080i and 720p • Select 'Confirm' when you can see the picture
No signal found during Install	Cable from the satellite dish may be disconnected.	Check the cable connections between SX and dish. Consult your installer if necessary.
	Dish may be out of alignment or pointing at the wrong position.	Consult your installer to have the dish re-aligned.
	Signal is from an SCR distribution network.	Configure SCR settings when option displays during signal check. Consult your installer.
	Dish set up to receive Sky Q and uses an incompatible Wideband LNB.	Consult an installer to have the LNB changed to a Standard or Hybrid fitting in order to make it compatible with Freesat.
Postcode not accepted during Install	Freesat broadcast error.	Choose not to try again and the installation will continue with the default channel line-up
	No space in postcode.	Make sure the space is entered in the postcode.
The TV picture is not HD	You may be watching an SD channel or using the AV connection to your TV.	Connect the SX with an HDMI cable to an HD-Ready TV and select an HD channel.
No information for a channel in the TV Guide	Information on the channel not downloaded.	Wait a few minutes for the Guide to received.
	You are on a manual (non-Freesat) channel.	Change to a Freesat channel.
Your remote control does not work	The SX is not turned on or its front is obstructed.	Ensure the front of the receiver is not obstructed.
	Batteries are weak/empty.	Replace the batteries in the remote control.
Your SX switches off after 3 hours	The SX is set to go to standby by default after 3 hours without interaction.	Set Auto Standby to 'Off' in the System section of Settings.
You can't remember the PIN	You've forgotten it or someone has changed it.	Your PIN can be reset with the master PIN. Please contact us.

KEEP IN TOUCH



Online

Keep up to date www.freesat.co.uk www.manhattan-tv.com

Follow us on Twitter [@Freesat_TV](https://twitter.com/Freesat_TV) [@manhattan_tv](https://twitter.com/manhattan_tv)

Find us www.facebook.com/Freesat



Email updates

Sign up to be the first to find out what's on, and hear about new channel launches, competitions and the latest offers.

Register at www.freesat.co.uk/keepintouch

We promise to only send you interesting and entertaining news and TV reviews, and we'll never pass on your personal details to anyone you don't want us to.



Support

For help with installation or using your new Freesat box, call us on

0345 313 0051 (local call rate)

or visit www.freesat.co.uk/help

Manhattan helpline **020 8450 0005**

Visit www.manhattan-tv.com



If you have any questions about set up, installation or Freesat the team are here to help
0345 313 0051 customerteam@freesat.co.uk



For any technical queries the Manhattan team are here to help **020 8450 0005**
www.manhattan-tv.com